


### Measuring for Straight Poles

Decide where the pole is to be positioned. Curtains should hang below the pole so they cover the eye of the ring, but leave the rings exposed and let the heading lie flush.

Measure the width of the pole you need in cm (A). Take into account the space needed for the curtains to be drawn back either side of the window (B). Choose the finials and check there is space for them (C). Disc finials or recess brackets are useful where space is limited.

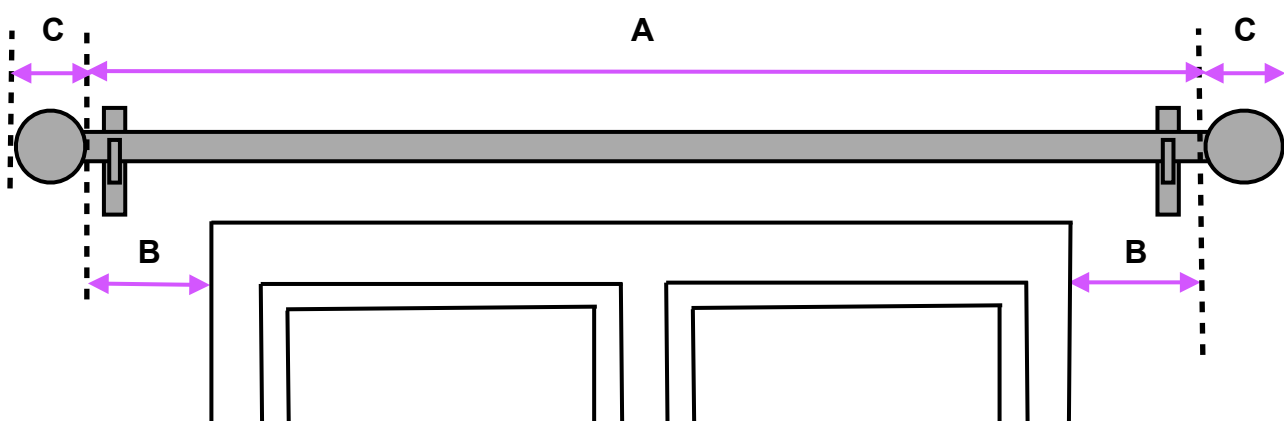

We can advise whether you need a centre bracket or a pole joiner. Please let us know if your curtains are particularly heavy or if you want to pull a single curtain across the pole.

For advice on brackets please see our *News and Advice* web page. Our standard bracket length is 6 cm (from the wall to the centre of the pole). 4 cm and 8 cm are also available, as are recess, ceiling fix & bespoke brackets. You may need longer brackets if you need to cater for a large sill or radiator, but remember that the further your curtains are from the wall the more light seeps around the sides.

We recommend at least 1 curtain ring per 10 cm of pole.

Tie-back hooks & hold backs are available for all ranges.